



ELECTRIC JACK EMERGENCY OPERATION INSTRUCTIONS

965 Lambrecht Road | Frankfort, IL, 60423

Phone: 866.403.9803 | Fax: 815.469.4705

Email: customerservice@riecotitan.com

www.riecotitan.com

EMERGENCY OPERATION OF YOUR ELECTRIC JACKS

There are three ways to operate your jack system without the use of your normal remote control:

1. The first way is to use the red emergency remote, which is furnished with the latest model electronics (OSI 433-N) This remote operates in the wired mode only, but does the same job as the regular remote. This red remote will only work with the OSI 433-N.
2. Another way is to use a 3/8" drive ratchet that inserts into the manual crank socket located in the top gear case cover. It is above where the gear motor connects to the jackpost, and is covered by a 1" diameter plastic cap. Turn crank clockwise to lower the jack, and counter- clockwise to raise the jack. (lowering the jack, lifts the camper) . When the camper is where you want it, replace the cap on each gear motor to keep water out.
3. A third way is to disconnect the jack wires from the receiver control box terminals , and run a wire from each battery post to the jack wires. To reverse direction, simply reverse the wires from the battery for up or down. Do not ever touch the battery wires directly onto the terminals as that will burn out your receiver control box.

General Precautions

---Move each jack no more than 4- 6" at a time. Always remember to keep the front of the camper level or higher than the rear of the camper.

---Do not use these emergency methods under normal operation as they are not safe without special watchfulness. Always have someone help watch your jack movements.

---You use these methods at your own risk & responsibility

If you have any questions about these methods,call us at 815-464-7400



965 Lambrecht Road | Frankfort, IL, 60423
Phone: 866.403.9803 | Fax: 815.469.4705
Email: customerservice@riecotitan.com
www.riecotitan.com

2-17-11
1 of 1