



Landing Gear Installation, Operation & Maintenance Instructions

965 Lambrecht Road | Frankfort, IL, 60423

Phone: 866.403.9803 | Fax: 815.469.4705

Email: customerservice@riecotitan.com

www.riecotitan.com



LANDING GEAR Electric Trailer Jacks

RV LANDING GEAR Trailer Jacks

5000# Capacity each Jack

Wireless Remote Controlled Universal Kit

- ✓ Heavy duty construction
5,000 lb. capacity per jack
- ✓ Rugged Precision drive system
- ✓ Self-braking for safe operation
- ✓ Large footpads for added stability
- ✓ Secure, safe mounting system
- ✓ Corrosion resistant powder coating
- ✓ Weatherproof sealed head



965 Lambrecht Road | Frankfort, IL, 60423

Phone: 866.403.9803 | Fax: 815.469.4705

Email: customerservice@riecotitan.com

www.riecotitan.com

Revised 08-11-15

READ ALL INSTRUCTIONS BEFORE STARTING TO INSTALL JACKS

SAFETY ALERT! This symbol - !!! Is used here to alert you to potential personal safety hazards and property damage. Obey all safety messages that follow this symbol to avoid possible property damage, injury or death.

LANDING GEAR REAR BRACKET & JACK INSTALLATION

LANDING GEAR FRONT JACK INSTALLATION

1. !!! TRAILERS ARE HEAVY AND ANY SUDDEN MOVEMENT OR WIND GUST CAN CAUSE TRAILER TO BECOME UNSTABLE AND CAUSE INJURY OR DEATH.

Always use jacks and lifting devices that are rated to carry the load of the trailer. Block trailer tires so trailer will not move.

2. Lower front jack extenders down to raise trailer to a position to remove front jacks.
3. Install jack stands under frame as close to the front as possible. On some models, slight modifications may be required to mount front jacks.
4. Lower front of trailer on to jack stands.
5. Check front of trailer with weight off of jacks to see if trailer is stable.
6. Raise one (1) front jack to the full retract position. Keep the second jack close too the ground to help support trailer
7. Disconnect battery power and shore power.
8. Mark and disconnect electrical wiring.
9. Raise extender tube up as far as it will go. This will give you the room to remove the jack through the bottom. On some models you can remove the extender and remove the jack through the top.
10. Remove two (2) nuts and bolts holding front jack to bracket and keep To reuse on new jacks.
11. Slide old jack outwards to remove from brackets.
12. Install new LANDING GEAR front jack into same mounting bracket and reinstall bolts and nuts.
On some models, slight modifications may be required to mount front jacks.
13. Lower jack extenders as close to the ground as possible with the locking pin engaged.
14. Repeat process on other side.
15. After both front jacks are installed, install new wiring harness.



965 Lambrecht Road | Frankfort, IL, 60423
Phone: 866.403.9803 | Fax: 815.469.4705
Email: customerservice@riecotitan.com
www.riecotitan.com

Revised 08-11-15

MAINTENANCE

JACKS

Lubrication: Once each year, run each jack out to its full extent, and clean the outer surface of the inner tube. Spray this surface with silicone dry spray lubricant. Clean outer surface of housing and spray the manual crank shaft with silicone lubricant. Apply a good auto wax to the outer surfaces of the jack system to maintain an attractive appearance. In coastal, rainy or humid areas, we recommend that a liquid wax such as Mother's Polish, McGuire's, or Turtle Wax be applied to the entire surface of the jacks. Keep the wax intact with a spray wax periodically. Repeat each year. An excellent alternate is Mercury's Corrosion Guard

LIMITED WARRANTY

Warranted against manufacturing defects and workmanship for two (2) years from date of purchase. Within this period, RIECO-TITAN PRODUCTS, INC. will at its option, repair or replace the product or any part thereof without charge for parts and labor. To exercise the warranty the original consumer-owner must return the original invoice, and the product freight prepaid and insured to RIECO-TITAN PRODUCTS, INC.

This warranty does not apply in the following cases; Improper installations, misuse, failure to follow installation and operating instructions, alterations, abuse, tampering, accident, or acts of God or nature.

All statements, technical information and recommendations contained herein are based on tests we believe to be reliable, but the accuracy or completeness thereof is not guaranteed and the following is made in lieu of all warranties, expressed or implied. Sellers and manufacturers only obligation shall be to replace such quantity of the product proved to be defective in accordance with published Warranty Policy. Neither seller nor manufacturer shall be liable for any injury, loss or damage, service direct or consequential arising out of the use of or the inability to use the product. Before using, user shall determine the stability of the product for his intended use and user assumes all risk and liability whatsoever in connection therewith.

Except as provided herein, RIECO-TITAN PRODUCTS, INC. Makes no express warranties and any implied warrant of merchantability or fitness for a particular purpose is limited to the duration of the written limited warranties set forth herein.

There will be charges rendered on repairs to the product make after the expiration of the aforesaid two (2) year Warranty Period.

This warranty gives you specific legal rights and you may have other rights which may vary from state to state.



965 Lambrecht Road | Frankfort, IL, 60423
Phone: 866.403.9803 | Fax: 815.469.4705
Email: customerservice@riecotitan.com
www.riecotitan.com

Revised 08-11-15