



REMOTE PAIRING INSTRUCTIONS

965 Lambrecht Road | Frankfort, IL, 60423

Phone: 866.403.9803 | Fax: 815.469.4705

Email: customerservice@riecotitan.com

www.riecotitan.com

Rieco-Titan – JEG Model Learning Systems

To Pair/Learn a transmitter.

Enter learn mode:

1. With the system OFF – Using the Rocker Switch on either the Receiver Module or Remote switch Plate, Press and Hold the ON button until the LED starts to flash at a rapid pace (in about 2 seconds).
2. Push any button on the Transmitter. The LED on the Receiver Module will flash twice then it will become a “Constant On”. The Transmitter is now “learned”.
3. Turn the system OFF, then you will be ready to use the system.

Option: Learn another transmitter by repeating steps 1 – 3.

- To learn the RED Remote, Plug the cord into the remote and into the Receiver Module or Remote switch Plate. Next follow steps 1 – 3 from above.

If the system is not working or responding correctly.

Trouble Shooting Steps:

Is the power ON and the Green Light on?

- Check the power source and press the ON side of the rocker switch.

Is the power ON and the Green Light Flashing?

- Turn system off and back on.

Total Reset of the System

- A. Remove positive(red) wire from the Receiver/Control Box for 30 seconds then reattach the power wire.
- B. Using the Rocker Switch on either the Receiver Module or Remote switch Plate, Press and Hold the ON button for 10 seconds. The LED will flash at a rapid pace at first, when the LED begins to flash at a slow pace, all codes in the memory will have been removed.
- C. Remotes must now be Paired to the Receiver. Follow steps 1 –3 above in To Pair/Learn a transmitter.



965 Lambrecht Road | Frankfort, IL, 60423

Phone: 866.403.9803 | Fax: 815.469.4705

Email: customerservice@riecotitan.com

www.riecotitan.com