

# WIRELESS REMOTE CONTROLLED

## Electric Camper Jacks Plus Two Auxiliary Devices

One button raises and lowers all jacks

Heavy duty construction 2,500 lb.  
capacity per jack

Rugged precision drive system

Self-braking for safe operation

Large footpads for added stability

Secure, safe mounting system

Corrosion resistant powder coating


Weatherproof sealed head



965 Lambrecht Road ♦ Frankfort, IL 60423  
Phone: 866.403.9803 ♦ Fax: 815.469.4705  
Email: [customerservice@riecotitan.com](mailto:customerservice@riecotitan.com)  
[www.riecotitan.com](http://www.riecotitan.com)

Doc. Date 12-7-10  
Rev. Date 09-11-25

Electronics Model  
# JEG-6LRX

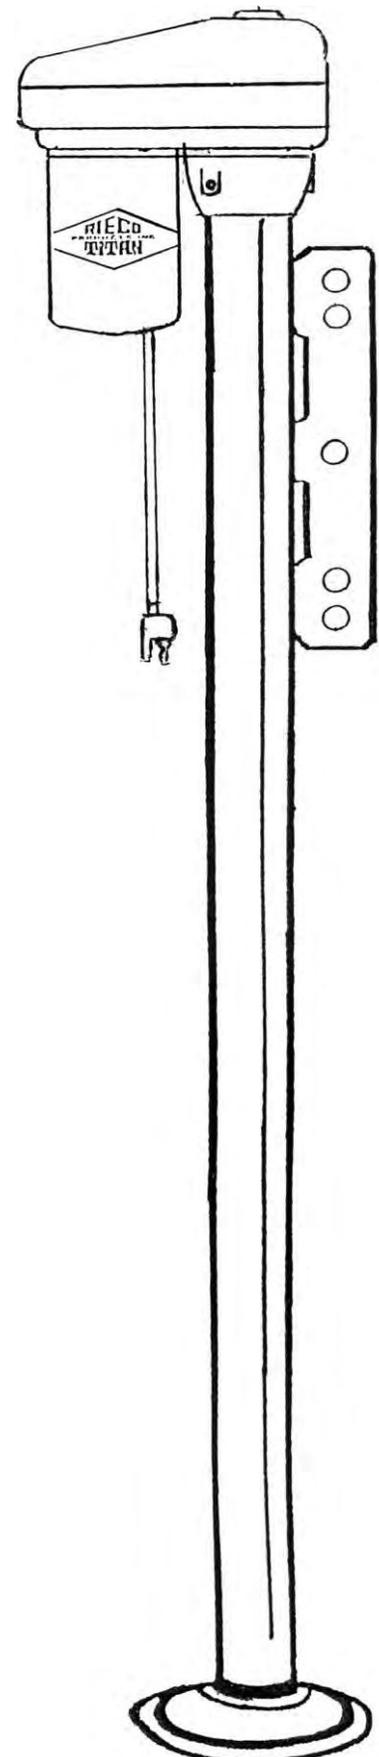

## RIECO-TITAN SIX CIRCUIT ELECTRONIC CONTROL SYSTEM

In order to expand the usefulness and application of the Rieco-Titan Electric Jack Electronic Control system, a modification was developed to provide control for two additional electric devices on a camper, such as a slide-out room, an awning, or a tongue jack.

For a very positive, safer design to control the switching from 4 circuits to a two circuit Operation, we developed the following system modifications:

**Mode Selection:** To select the controls for either the four jacks or the two auxiliary devices, we provided a Selector/Status button on the face of the remote (incorporated into the button membrane) for changing from four circuits to two circuits, and vice-versa. The operator presses the Selector/Status button for five seconds, and an LED will indicate bright red for the four jack mode and green for the two auxiliary device mode.


**Confirmation:** For confirmation of the mode of control at any time, the operator presses the Selector/Status button once quickly and the LED will indicate the mode that the system is in.

This method of mode selection also eliminates the concern about draining the battery in the remote.

**Operation:** The top four buttons on the remote will operate the two auxiliary devices. The bottom four buttons and the "All" buttons will be inoperative during the Auxiliary mode.


In the four Jack mode, the buttons will all function as our normal button controls, with all buttons active. Labels are provided on the face of the remote to indicate which buttons control auxiliary devices and which control jacks. The red remote will be set up identically.

### REMOTE CONTROL BUTTON ARRANGEMENT

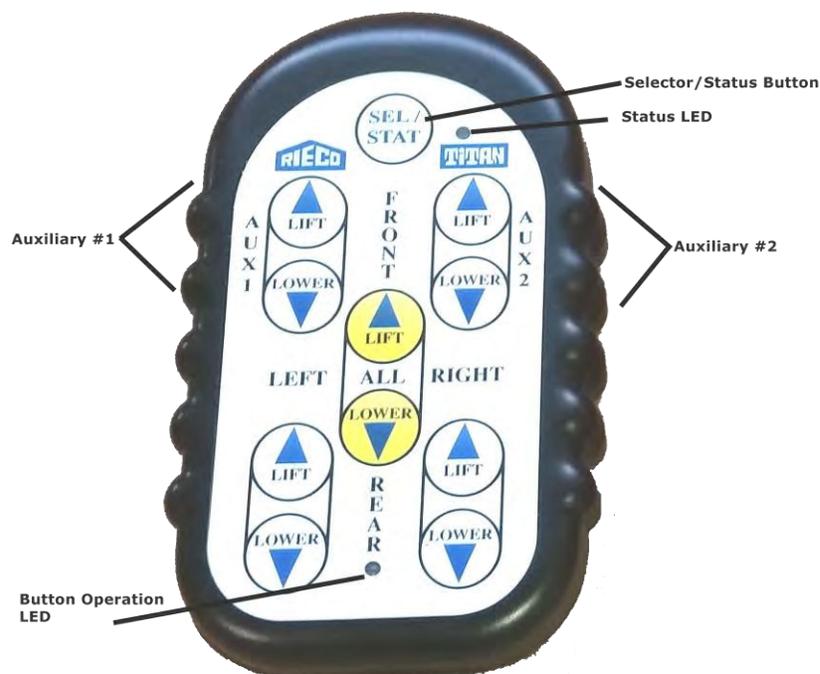

The Receiver Control Box for the six circuit system is accommodated by utilizing the cube within the case to house the four extra relays, fuses and terminals. Appropriate labeling is provided to indicate component designations as on our present unit.

## RECEIVER CONTROL BOX

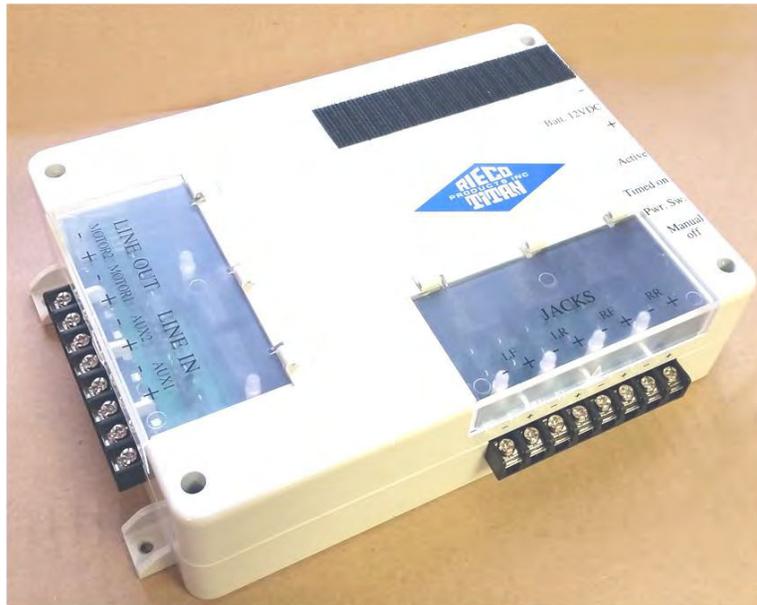


**SAFETY ALERT!** This symbol - !!! is used here to alert you to potential personal safety hazards and property damage. Obey all safety messages that follow this symbol to avoid possible property damage, injury, or death.

**NOTE:** Camper manufacturers must ensure that camper wall corners are adequately reinforced for mounting jacks.

**BRACKET & JACK INSTALLATION**

1. Bolt the flat and formed bracket pieces of each 13" corner bracket together using the 3/8" x 1 1/4" bolts and hardware in bracket kit. Assemble as shown in figure 1. Swing-out brackets can be purchased to allow front jacks to be mounted to clear dual wheels.
2. Position the brackets on the four corners of the camper, starting with the two front brackets. Next, place the top of the rear brackets at the same height as the top of the front brackets. See figure 2.
3. Mark, saw and remove bracket length of trim molding, which will be replaced by the brackets.
4. Tap down ribbed aluminum with mallet, so brackets will draw tight to camper corner.
5. Place a thin strip of sealer compound on each side of corner and across top of the brackets.
6. Mount brackets so that the flat side (joined together in step 1), extends away from front and rear of camper. See figure 3.
7. Position brackets and drill 5/32" holes into camper corner. Insert lag screws alternately into each bracket side, and tighten screws. Holes are provided in the bracket for through the wall bolting on heavier campers. See figure 3, dotted outline.
8. These lag screws must be retightened later in the process, after the camper has been lifted a few times. Take caution not to shear off screw heads or strip threads in wood.

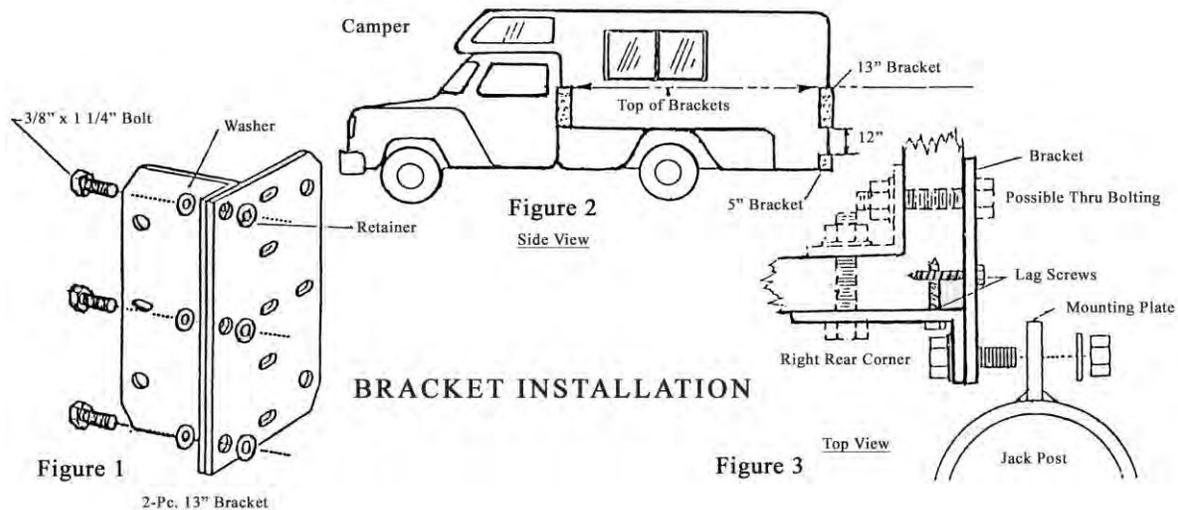

## MECHANICAL INSTALLATION (continued)

9. Position the 5" lower bracket on the rear corners of the camper at least 12" below the main corner brackets. Fasten brackets as previously stated in #7. See figure 2.
10. Bolt each jack to the upper bracket through the mounting holes in the mounting plate of the jack, using 3/8" x 1 1/4" bolts, washers, and nuts. Place a washer under the bolt head and under the nut. Tighten loosely.
11. Open the "C" clamp for each rear jack and fit them over the jackpost for attaching to the lower 5" bracket. Place the clamp flanges on each side of the mounting bracket, inserting a bolt and washer into the "C" clamp and bracket holes, then add a washer and nut. Tighten loosely. Fig. 4.
12. Rotate jack power heads so that the motors face toward the center of the camper on all jacks, and check the height to assure all jacks are at the same level. Tighten all nuts on all brackets securely. Torque them to 15-20 foot-pounds.
13. As a final installation procedure, it is necessary that you coat the entire surface of the jacks and brackets with a liquid wax such as Mothers Polish, McGuires, or Turtle Wax. An excellent alternative is Mercury's Corrosion Guard. This will prevent corrosion and maintain the beauty of the jacks.

## ELECTRICAL INSTALLATION    ALSO SEE ATTACHED SIX CIRCUIT ELECTRONIC CONTROLS DESCRIPTION

1. The electric jack kit comes equipped with four (4) female receptacles and cords. Each jack has a cord with a male plug that accesses power through the receptacle. The receptacle must be mounted in close proximity to the jack near each corner of the camper.
2. Wire the receptacles as shown on the diagram in figure 3. The receptacle is a flange design which fits snugly into a 7/8" diameter hole which must be drilled into the exterior wall of the camper. Fasten to the camper wall with two screws 6" from the edge of the camper.
3. Interior wires connecting the receptacles to the receiver control box should be #10 AWG copper stranded 600 V, UL wire, using locking spade connectors for #10 studs.
4. The interior wiring from these receptacles can be routed up to the top of the camper, and run above the ceiling line to avoid the tedious routing through the various lower compartment walls. Alternately, they can be brought out and routed externally to a point where they re-enter the camper for connection to the receiver control box terminals.
5. Install a heavy duty Marine/RV battery in the camper with charging provisions. Locate the battery in a separate compartment, but near the receiver control box.
6. Connect the two wires from each jack to the receiver. The left front jack should be connected to the receiver terminals marked LF. The right front to the RF terminals, and so on for the rear jacks. Each set of terminals has a (+) and a (-) side. Connect according to the wiring diagram shown in figure 3. Red wire is positive; black wire is negative.
7. Mount the receiver control box near a compartment door to maximize transmitter wire length outside the camper. Also, locate it as close to the battery compartment as feasible. Use #8 AWG wire to connect the battery terminals to the power input terminals in the receiver control box. Use a ring connector (or split wire)
8. **!!! Install a 60 amp circuit breaker in the wiring to protect the receiver control box electronics.\***
9. The negative lead from the battery must be connected to the negative terminal, and the positive lead from the battery must connect to the positive terminal in the receiver control box. !!! ( See special note of caution, below )
10. The transmitter can be used in either one of these modes: (1) Wired, with a cable and plug connection to the receiver control box or remote switch panel (2) Wireless, which is operated with a 12 volt battery, sending radio frequency signals to an antennae in the receiver control box.
11. A remote " on-off " switch panel is provided to control the power to the system. This switch should be mounted inside the camper, near the door. The switch is equipped with an LED light which is lit when the power is on. The power stays on for 15 minutes, and then automatically shuts off along with the LED light, stopping any possible operation of the jack system. (This safety feature eliminates the need to remember to switch the system "off") Plug the attached cable from the remote switch panel into the receiver control box. Whenever the LED light is off, it will be necessary to press the "on" switch to restore power to the system to operate the jacks. The receiver control box and the remote switch panel have manual off controls.
12. The wireless transmitter needs no wired connection from the transmitter to the receiver control box, but instead, an antennae wire is provided to pick up the RF (radio frequency) commands.

\* Item # 8 above - 60 Amp circuit breaker can be acquired from Rieco- Titan Products, Inc. 866-403-9803. Part # 16069

**ELECTRICAL INSTALLATION ( continued ) ALSO SEE ATTACHED SIX CIRCUIT ELECTRONIC CONTROLS DESCRIPTION**

**!!! CAUTION !!! Do not connect 12VDC power from the battery to any receiver terminals except the two 12VDC battery terminals marked on the receiver case. To do so will burn out the receiver. This is not covered by the warranty.**

**13. To Pair/Learn a Transmitter**

- a. With the system OFF - using the Rocker Switch on either the Receiver Module or Remote switch plate, Press and Hold the ON button until the LED starts to flash at a rapid pace (in about 2 seconds)
- b. Push any button on the Transmitter. The LED on the receiver module will flash twice then it will become "Constant On". The Transmitter is now "learned".
- c. Turn the system OFF, then you will be ready to use the system.


**OPTION: Learn another transmitter by repeating steps 13a-13c**

**- To learn the RED remote, plug the cord into the remote and into the Receiver Module or Remote Switch Plate. Next follow Steps 13a-13c**

**Fig. 3**

**Use #8 AWG wire between receiver control box & battery.**

**Use #10 AWG wire between receiver and jacks.**

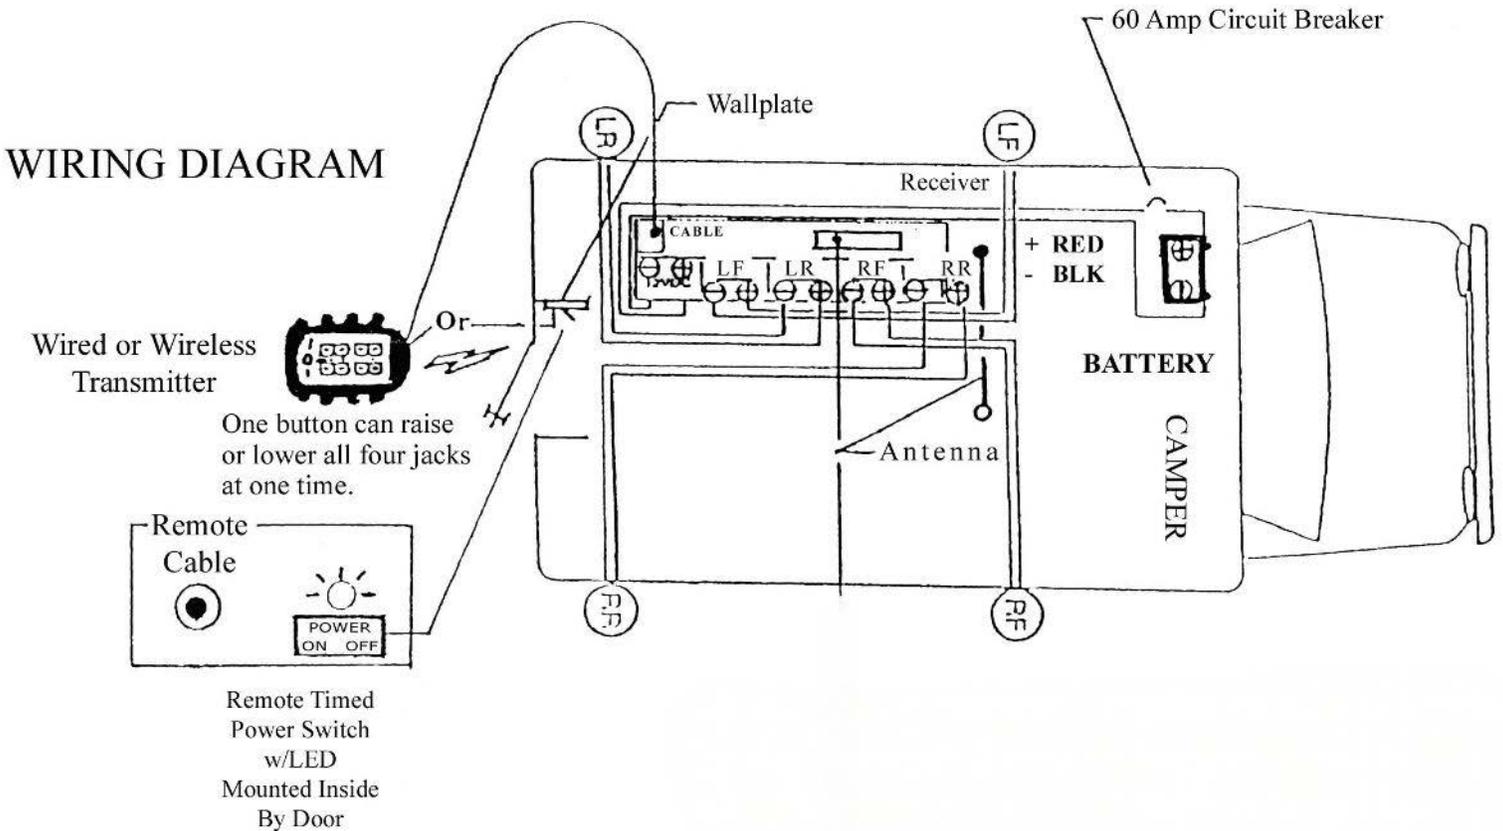

**Remote Switch Panel**


**IN ORDER TO OPERATE THIS ELECTRIC JACK SYSTEM, IT IS NECESSARY TO INSTALL A HEAVY DUTY MARINE/RV BATTERY WITH PROVISION TO KEEP THE BATTERY CHARGED. LOCATE IT IN A SEPARATE SITE, BUT NEAR THE RECEIVER.**

## ELECTRICAL INSTALLATION ( Continued )

14. Trouble Shooting Steps if system is not working or responding correctly:
- a. Is the power ON and the Green Light on?
    - Check the power source and press the ON side of the rocker switch
  
  - b. Is the power ON and the Green Light flashing?
    - Turn system off and back on
  
  - c. Total Reset of the System
    - i. Remove positive (red) wire from the Receiver/Control Box for 30 seconds then reattach the power wire
  
    - ii. Using the Rocker Switch on either the Receiver module or Remote Switch Plate, Press and Hold the ON button for 10 seconds. The LED will flash at a rapid pace at first, when the LED begins to flash at a slow pace, all codes in the memory will have been removed.
  
    - iii. Remotes must now be Paired to the Receiver. Follow steps 13a-13c above.
15. Our receiver control box is equipped with an LED light in the top for each jack circuit. When the jack is activated by the remote button control, the LED for that jack or jacks is illuminated indicating a completed circuit. Also included inside the box are eight 30 amp automotive blade type fuses (2 per jack). If a short circuit occurs, or a current overload happens, the fuse will burn protecting the electronics and the motors. It is important to find the cause of the blown fuse before replacing the fuse.
16. EMERGENCY REMOTE CONTROL The electronic control system now includes a remote emergency button control, which can take a great deal of the exasperation and sweat out of the lost or damaged remote control situation. The emergency button control is colored bright red, and is intended for use in emergency situations only. It will operate your electric jacks with electricity, rather than have you mechanically crank them to get you on the road again. This new control operates in the wired mode only, not RF (wireless) , but will do the job. It will be found attached to the receiver control box in the camper. The control comes with a special red connector wire to plug into the remote switch panel to operate the system. We suggest that as soon as a replacement is obtained for the lost or damaged remote control, the emergency units be returned to their storage location for possible future emergency use. This emergency control has the same security code setting as your regular remote and receiver control box.

Fig. 4


The “C” clamp and the 5” bracket are intended to be used when the camper manufacturer recommends their use. When they are called for, use three (3) bolts on the 13” bracket and one (1) on the 5” bracket. The 5” bracket is used on the left and right rear of the camper beneath the 13” bracket.

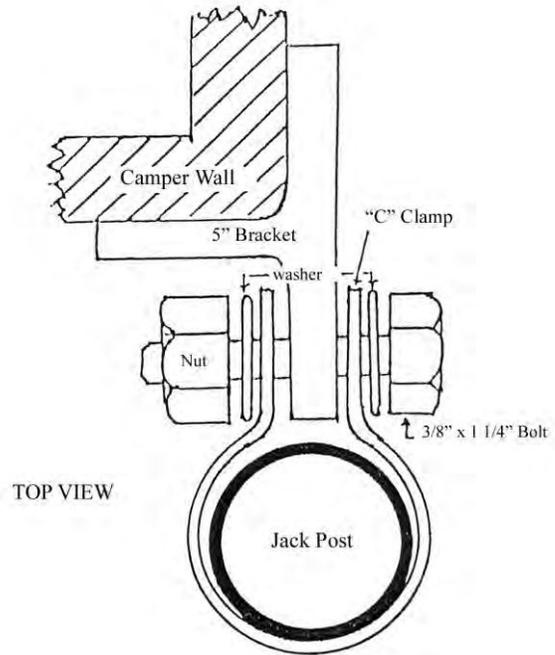

**ALSO SEE ATTACHED SIX CIRCUIT ELECTRONIC CONTROLS DESCRIPTION**

Fig. 5


The wired remote transmitter is shown here. It is the electrical control device that operates the electric jacks. The operation buttons are arranged by jack location. The left side is the driver’s side, and the right side is the passenger’s side of the camper. The top section buttons control the front jacks, middle section, all jacks and the bottom section, the rear jacks. The “UP” arrow signifies lift the camper, while the “DOWN” arrow means lower the camper. The cable on the wired transmitter is plugged into the remote switch panel. \* The wireless transmitter contains a 12-volt battery to power the RF (radio frequency) signal commands it sends to the antenna coming out of the receiver control box.

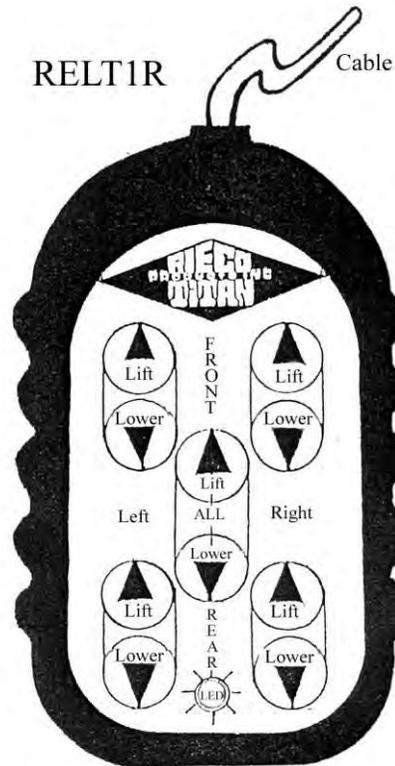

\* For best wireless performance of the electric jack controls, it is recommended that you install a fresh battery in the hand held remote control at the beginning of each season ( 1 per year ) This will insure that the radio control signal is strong and effective. The battery is # A-23 12 Volt Alkaline. It is available at Walgreens, Radio Shack, and battery stores.


\* The transmitter cable can also be plugged directly into the receiver control box.

**NOTE: THE BUTTONS ON THE TRANSMITTER FUNCTION AS FOLLOWS: THE “UP” ARROW SIGNIFIES LIFT THE CAMPER, WHILE THE “DOWN” ARROW MEANS LOWER THE CAMPER.**

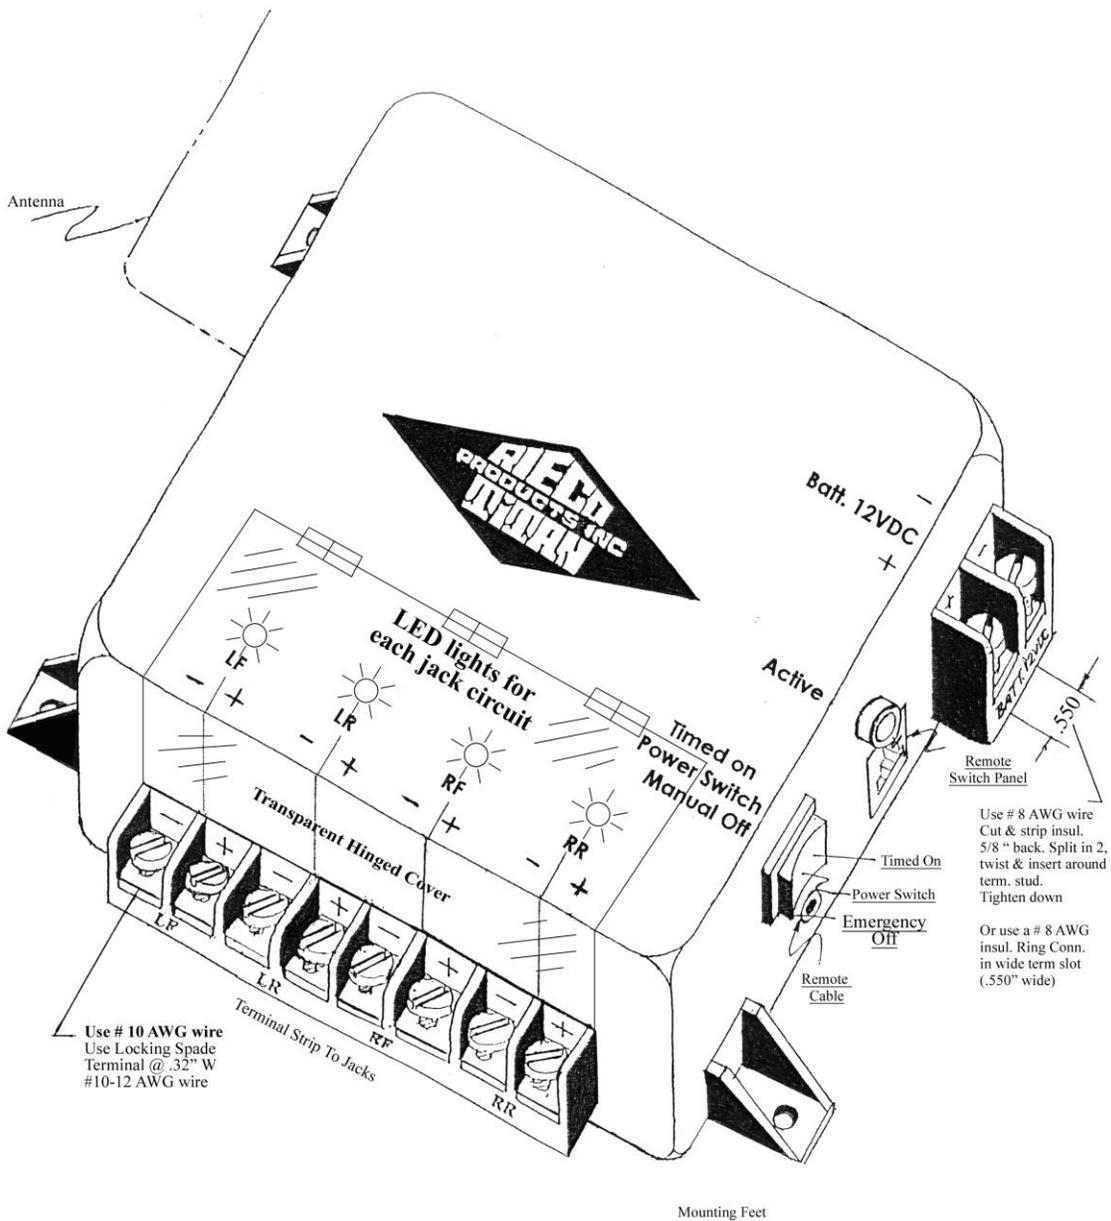

WIRED-WIRELESS  
RECEIVER CONTROL BOX

**ALSO SEE ATTACHED SIX CIRCUIT ELECTRONIC CONTROLS DESCRIPTION**

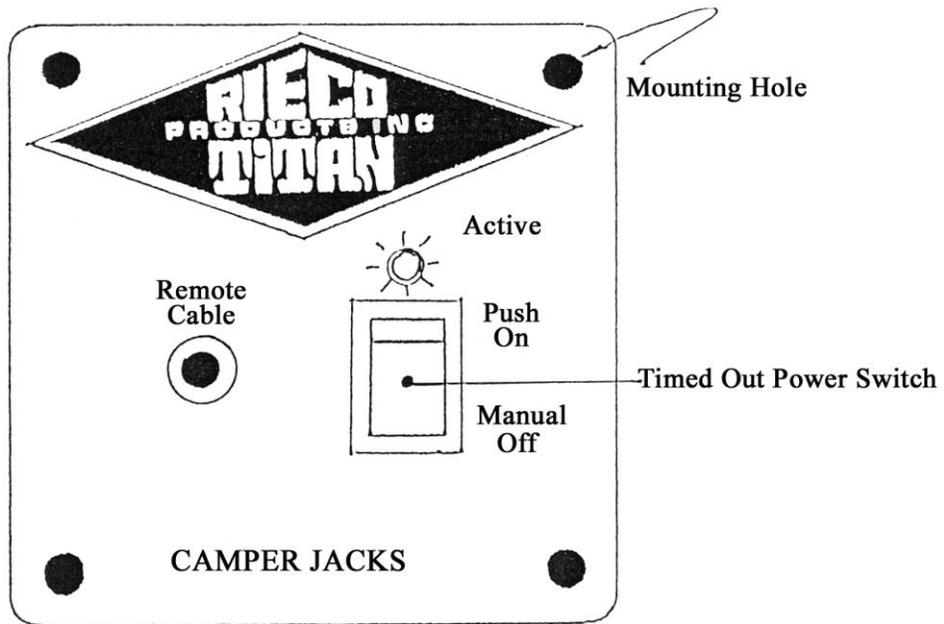

REMOTE SWITCH PANEL

**NEVER ACTUATE THE AUXILIARY CONTROLS UNLESS CAMPER IS ON THE GROUND PARTICULARLY IF THEY CONTROL A ROOM SLIDE OR AWNINGS**

**!!! FOLLOW THE SAFETY RECOMMENDATIONS LISTED BELOW TO AVOID POSSIBLE INJURY AND/OR PROPERTY DAMAGE**

1. This jack system is designed and intended for loading, unloading, and stabilizing your truck camper while in storage. Do not allow a person or persons in your camper while the jacks are in use.
2. Never exceed the rated capacity of your camper and jack system. This jack system is rated at 2,500 lbs. per jack, 6,000 lbs. net camper weight.
3. Do not store your camper in a windy area, or on spongy soil. Do not place blocks under your jacks for additional lift or clearance. These jacks lift a full 36".
4. Maintain a fully charged battery.
5. When using jacks, always remain in full view of jacks being moved.
6. Never raise the rear of the camper higher than the front of the camper.
7. In freezing weather, when your camper is up on jacks, be aware that your jack footpads may be buried or frozen in ice. This can cause damage to the corners of your camper when you lift the jacks off the ground. Clear off any ice before you lift the jacks up.
8. Always keep the power switch in the "OFF" position when system is not in use.
9. Never over- extend or over- retract jacks past their full travel limits. Jacks have a slip clutch that prevents damage. However, when a clicking noise is heard, release the transmitter button immediately. The wiring is equipped with circuit breakers that automatically reset in 20 seconds if motors become over heated.
10. Store transmitter in a secure location inaccessible to children.

**OPERATING INSTRUCTIONS**

**UNLOADING THE CAMPER**

1. !!! Disconnect all camper tie downs and electric devices from truck. Always keep front of camper higher or level with rear of the camper.
2. Push the power switch "ON". This powers the jack system so that one, two or four jacks may be actuated simultaneously.
3. Press the "UP" buttons on the transmitter for the two front jacks until the jacks make contact with the ground.
4. Repeat step 3 for the two rear jacks.
5. Press the "UP" buttons for the two front jacks, raise the front of the camper 3-4".
6. Press the "UP" buttons for the two rear jacks until the rear of the camper is level with the front.
7. Continue the above lifting procedure until the camper is approximately 6" above the truck bed or until it clears the highest point on the truck bed.
8. !!! Carefully drive the truck forward taking care not to hit or rub the camper jacks, truck wheels or fenders.

**LOWERING THE CAMPER**

Always lower the rear of the camper first, 3-4" at a time. Lower the rear jacks then the front jacks until they are level with the rear. Then lower the rear jacks again. Continue this procedure until the desired height is reached. Turn off power on the receiver control box when lowering is complete.

## **LOADING THE CAMPER**

1. Push the rocker switch "ON" in the receiver unit or the remote switch panel.
2. Press the "UP" buttons on the transmitter until the two front jacks have raised the camper 3-4".
3. Raise the two rear jacks 3-4" until level with front.
4. Repeat steps 2 & 3 until camper is approximately 6" above truck bed or highest point on truck bed.
5. !!! Back truck carefully under the camper, making sure to not hit or rub the camper jacks, truck wheels or fenders.
6. Make sure any ice is cleared away from the jack footpads(see safety recommendations, page 9)
7. Lower the camper onto the truck by following the instructions in the "LOWERING THE CAMPER" section.

## **MANUAL OPERATION**

If the battery power is low, switch the power "OFF" to the receiver. This will eliminate the dynamic braking effect of the motor. Remove the access cap on the top of the powerhead. The crank shaft of the gearbox will be accessible to turn with a 3/8" ratchet wrench. Rotate the wrench counter-clockwise to raise the jack and clockwise to lower the jack. Do not activate the motor with the wrench still on the crank shaft.

## **CAMPER STORAGE**

Jacks can be used for permanent storage. **However, for best stability, set the camper on blocks, and use the jacks for stabilizing only.**

## **LIFTING AND LOWERING - ALL JACKS MODE**

The front jacks lift the heaviest load, and consequently will raise slower than the rear jacks. Conversely, the front jacks will lower faster than the rear jacks. This phenomenon will be most noticeable when using the "ALL" jacks button on the transmitter. It is necessary that the camper level condition be closely watched so as to prevent the rear of the camper from being at a higher level than the front. It will be necessary to stop the "ALL" jacks operation to keep the level condition of the camper even front to back and side to side.

## **MAINTENANCE**

The internal parts of the jack system are permanently lubricated and should not require further lubrication. Once each year, run each jack out to its full extent, and clean the outer surface of the inner tube. Spray this surface with silicone spray lubricant. Clean outer surface of housing and spray the manual crank shaft with silicone lubricant. Apply a good auto wax to the outer surfaces of the jack system to maintain an attractive appearance. In coastal, rainy or humid areas, we recommend that a liquid wax such as Mother's Polish, McGuires, or Turtle Wax be applied to the entire surface of the jacks. Keep the wax intact with a spray wax periodically. Repeat each year. An excellent alternate is Mercury's Corrosion Guard.

The electronic components of the jack system also require very little maintenance. The remote transmitter can be cleaned periodically with a soft damp cloth. Solvents or cleaners are to be avoided since they can leak inside causing electrical damage. Wipe battery contacts with a dry lint-free cloth. If the transmitter or receiver get wet, open their respective covers, and dry thoroughly before re-using.

**TROUBLE SHOOTING**

For any control or electrical malfunction, check the following things to find the cause:

- Make sure that the receiver power switch is "ON".
- Make sure all cables are firmly plugged into the receptacles. Re-plug if jack is not responding.
- Check camper batteries for charge status.
- Check transmitter for wetness or damage.
- Check transmitter battery and code switches to make sure they match those in control box.

After checking the above, if a jack in the system will not operate, replace it, or have it repaired. Call for assistance at Rieco-Titan Products 866-403-9803

!!! You are alerted to avoid interference with blasting operations. Do not use your remote near any area where electrical blasting caps are stored or used, or in areas posted : TURN OFF TWO-WAY RADIO. Obey all signs and instructions that you see in such areas. Be especially alert in areas with explosive atmospheres. Signs and warnings are not always clearly posted; such as in fueling, and fuel or chemical storage areas where the air contains chemicals, dust, powders or anywhere you are instructed to turn off your vehicle engine.

**\*\*\*\*\* LIMITED WARRANTY \*\*\*\*\***

Products are warranted against manufacturing defects and workmanship for two (2) years from the date of purchase. Within this period, RIECO-TITAN PRODUCTS, INC. will at its option, repair or replace the product or any part thereof without charge for parts and labor. To exercise the warranty, the original consumer-owner must return the original invoice, and the product freight prepaid and insured to RIECO-TITAN PRODUCTS, INC.

This warranty does not apply in the following cases; Product finish, improper installation, misuse, failure to follow installation and operating instructions, alterations, abuse, tampering, accident, or acts of God or nature.

All statements, technical information and recommendations contained herein are based on tests we believe to be reliable, but the accuracy or completeness thereof is not guaranteed and the following is made in lieu of all warranties, expressed or implied. Seller's and manufacturer's only obligation shall be to replace such quantity of the product proved to be defective in accordance with published Warranty Policy. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential arising out of the use of or the inability to use the product. Before using, user shall determine the stability of the product for his intended use and user assumes all risk and liability whatsoever in connection therewith.

Except as provided herein, RIECO-TITAN PRODUCTS, INC. makes no express warranties and any implied warrant of merchantability or fitness for a particular purpose is limited to the duration of the written limited warranties set forth herein.

There will be charges rendered on repairs to the product made after the expiration of the aforesaid two (2) year Warranty Period.

This warranty gives you specific legal rights and you may have other rights which may vary from state to state.

.....  
**Electronic Controls**

**Model #JEG-6LRX**


**FCC ID#PM6HOMPETOSI43**

**This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:**

- ( 1 ) This device may not cause harmful interference and**
- ( 2 ) This device must accept any interference received, including interference that may cause undesired operation.**

**Doc. Date 8-24-08**

**Revised Date 9-11-25**

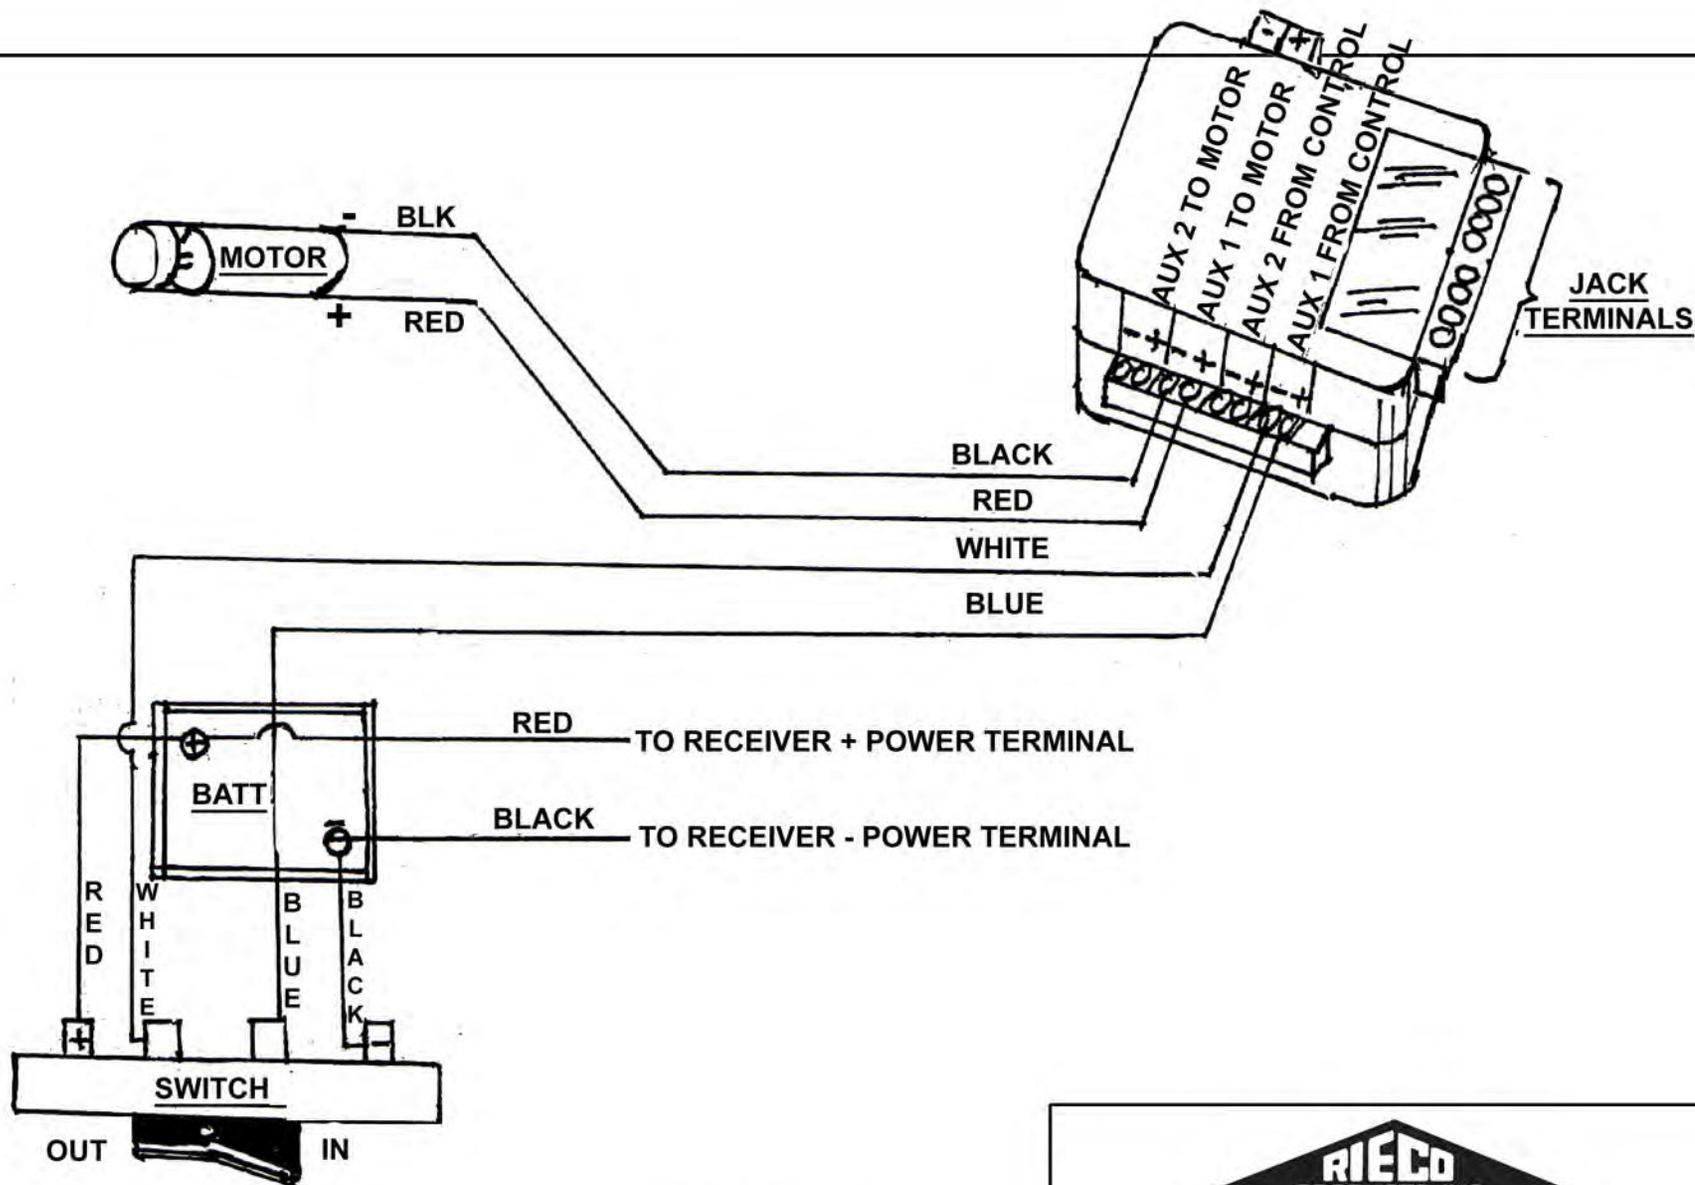


SINGLE MOTOR

**Tolerances Allowed**  
**Fractional Dimensions ... +/- .031**  
**Decimal Dimensions**  
 1 Place ..... +/- .015  
 2 Place ..... +/- .010  
 3 Place ..... +/- .005  
 Unless Otherwise Specified



AWNING CIRCUIT DIAGRAM

965 Lambrecht Road Phone: 866.403.9803  
 Frankfort, IL 60423 Fax: 815.469.4705  
 email: customerservice@riecotitan.com  
 www.riecotitan.com

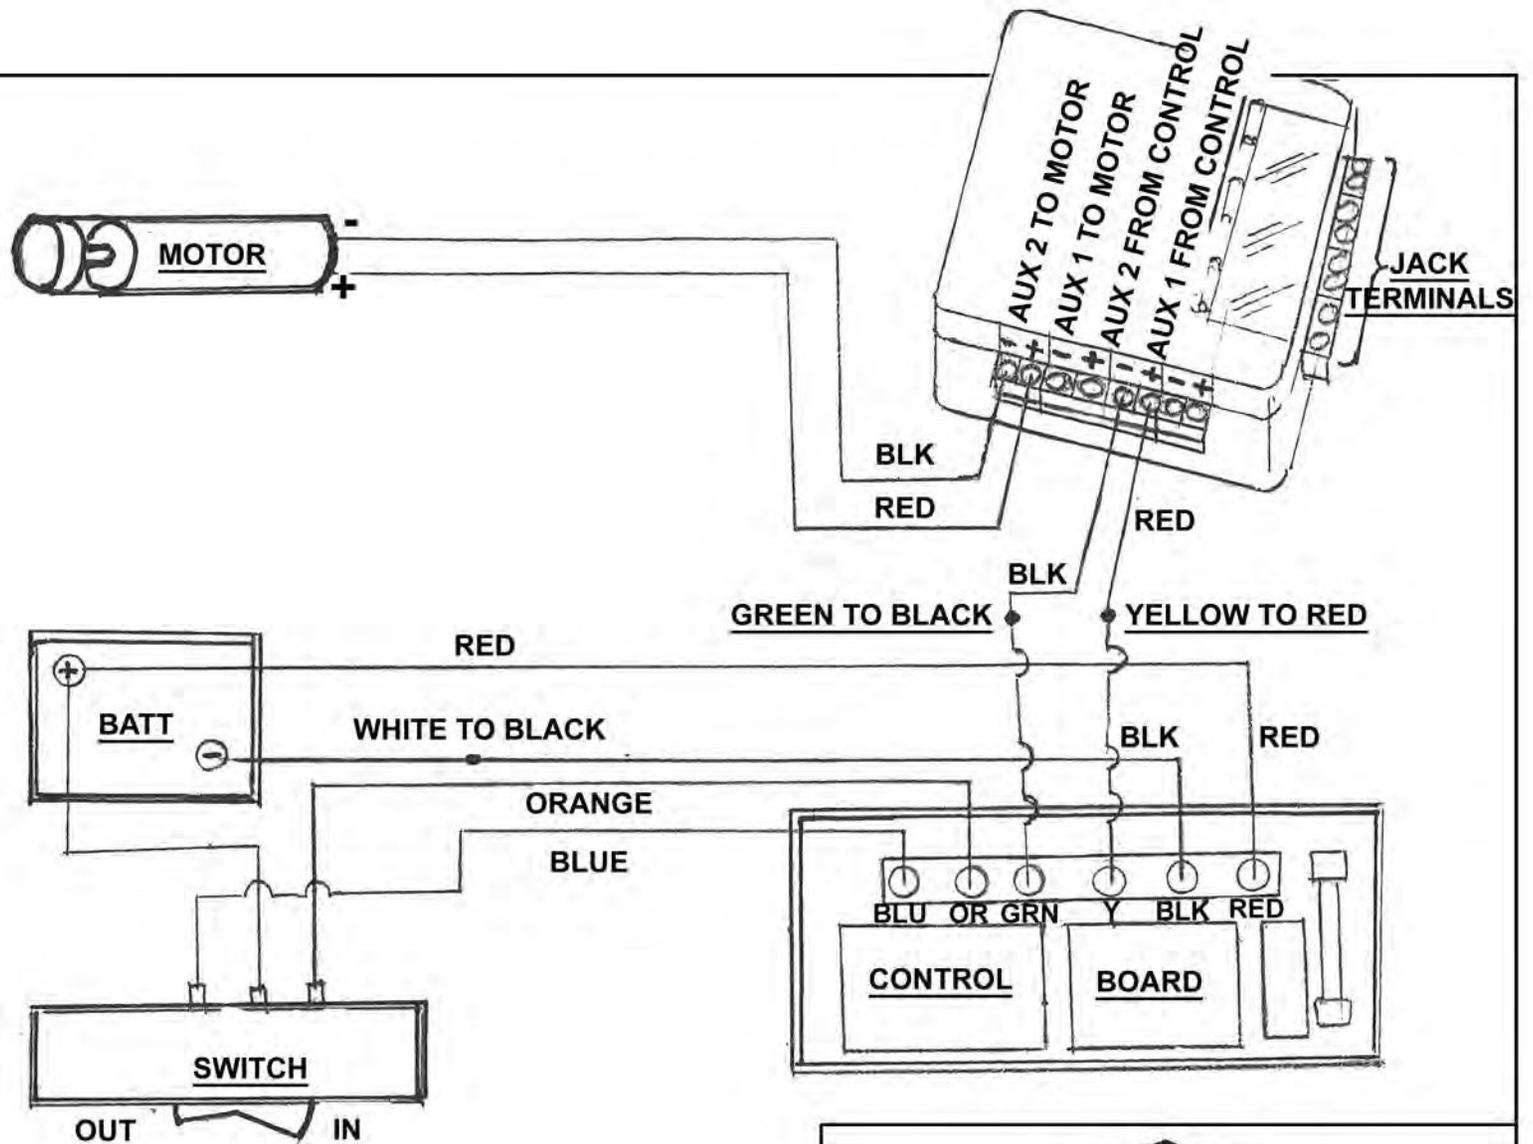

**Tolerances Allowed**  
 Fractional Dimensions ... +/- .031  
 Decimal Dimensions  
 1 Place ..... +/- .015  
 2 Place ..... +/- .010  
 3 Place ..... +/- .005  
 Unless Otherwise Specified



**SLIDE ROOM CIRCUIT DIAGRAM**

965 Lambrecht Road Phone: 866.403.9803  
 Frankfort, IL 60423 Fax: 815.469.4705  
 email: customerservice@riecotitan.com  
 www.riecotitan.com

4-24-14