



POWERHEAD SLEEVE COVER INSTRUCTIONS

Rieco-Titan Truck Camper Jacks

965 Lambrecht Road | Frankfort, IL, 60423

Phone: 866.403.9803 | Fax: 815.469.4705

Email: customerservice@riecotitan.com

www.riecotitan.com



THERE ARE TWO METHODS TO INSTALL THE POWERHEAD SLEEVE COVER ON YOUR JACK:

1. From the Bottom of the Jack



a. Check for C-Clamps:

- i. **If you have C-clamps mounted, this method may not work. If so, proceed to Option 2.**

b. Slide on the Cover:

- i. Begin by sliding the bottom of the jack through the drawstring opening.
- ii. Gently pull the cover up and over the jack until it is fully covered.

2. From the Top of the Jack


Step: 1



Prepare the Cord Lock:

Use your fingers or a tool to open the cord lock at the end of the drawstring.

Step: 2

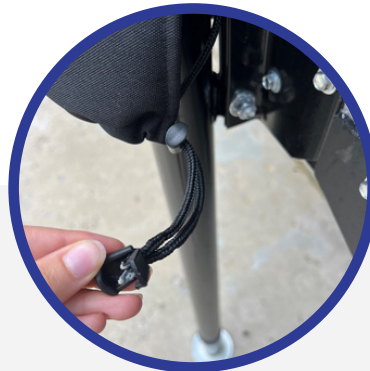

Remove the Cord Stopper:

Pull the cord stopper off the strings.

Step: 3



Slide on the Cover:

Place the Powerhead Sleeve Cover over the top of the jack, pulling it down into place.



Step: 4



Reattach the Cord Stopper:

Once the cover is in place, put the cord stopper back on the strings.

Step: 5



Secure with the Cord Lock:

Snap the cord lock back in place to secure the cover.

Additional Tips:

For best results, remove the covers when raising or lowering the jacks.

If the cord lock or stopper is difficult to unlock, you may carefully cut it off as a last resort. The adjustable cord lock can still secure the cover by tightening the strings.

If both plastic pieces are lost, tying a simple knot with the strings will also secure the cover effectively.



Need Help?

If you have any questions, feel free to contact our team at:
[**customerservice@riecotitan.com**](mailto:customerservice@riecotitan.com)

Phone: 866.403.9803

